


SKR33 Without Cover, Motor Wrap

Model SKR33□□A (with a Single Long Block)

Model SKR33□□B (with Two Long Blocks)

For model number coding, see **A2-28**.

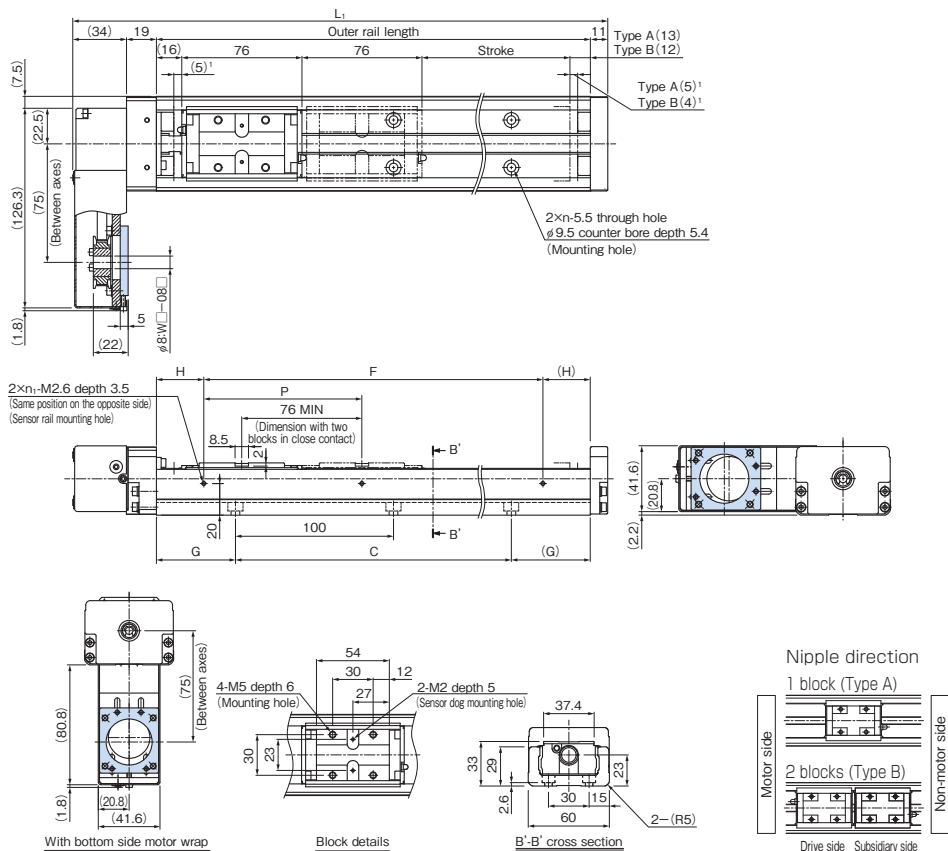

¹ Distance between the mechanical stopper and the stroke starting position.

Stroke (mm) (stroke between mechanical stoppers)		Outer rail length (mm)	Overall length L_1 (mm)	C (mm)	G (mm)	P (mm)	F (mm)	H (mm)	n	n_1	Overall main unit mass (kg)	
Type A	Type B ¹										Type A	Type B
45 (55)	—	150	214	100	25	100	100	25	2	2	2.2	—
95 (105)	—	200	264	100	50	100	100	50	2	2	2.6	—
195 (205)	120 (129)	300	364	200	50	200	200	50	3	2	3.3	3.7
295 (305)	220 (229)	400	464	300	50	200	200	100	4	2	4	4.4
395 (405)	320 (329)	500	564	400	50	200	400	50	5	3	4.8	5.2
495 (505)	420 (429)	600	664	500	50	200	400	100	6	3	5.5	5.9
595 (605)	520 (529)	700	764	600	50	200	600	50	7	4	6.2	6.6


¹ Indicates a value when two inner blocks are in close contact with each other.

SKR33 With Cover, Motor Wrap

Model SKR33□□A (with a Single Long Block)

Model SKR33□□B (with Two Long Blocks)

For model number coding, see **A2-28**.

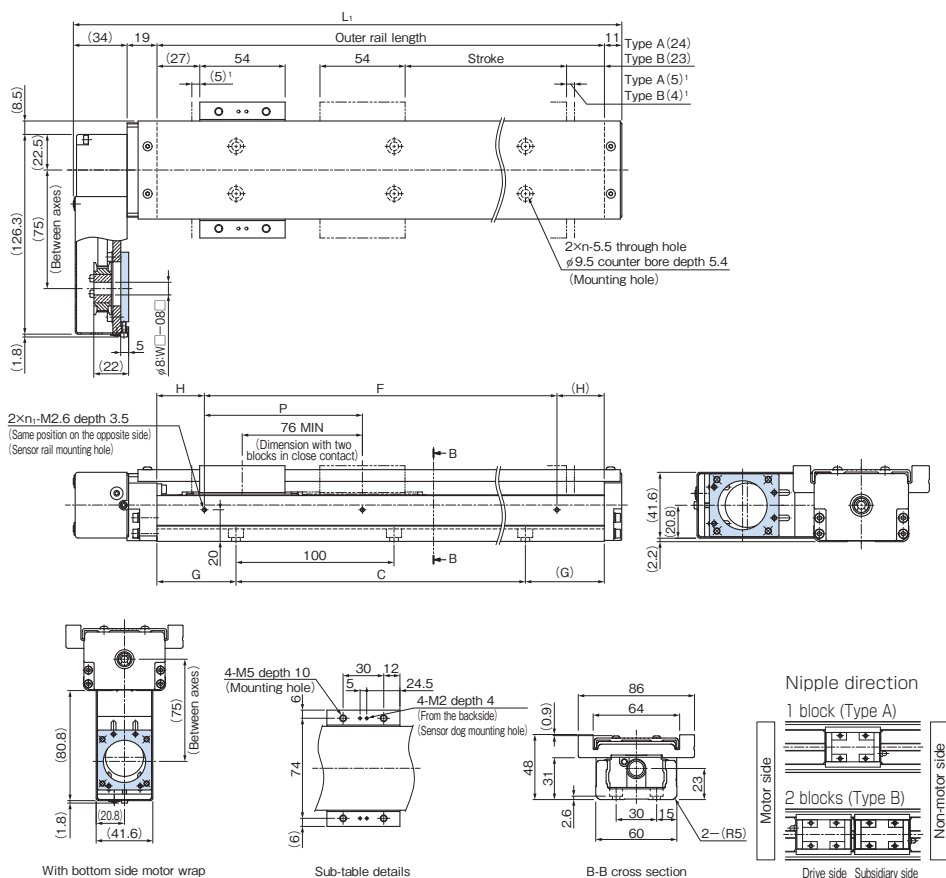

With bottom side motor wrap

Sub-table details

B-B cross section

¹ Distance between the mechanical stopper and the stroke starting position.

Stroke (mm) (stroke between mechanical stoppers)		Outer rail length (mm)	Overall length L ₁ (mm)	C (mm)	G (mm)	P (mm)	F (mm)	H (mm)	n	n ₁	Overall main unit mass (kg)	
Type A	Type B¹										Type A	Type B
45 (55)	—	150	214	100	25	100	100	25	2	2	2.5	—
95 (105)	—	200	264	100	50	100	100	50	2	2	2.9	—
195 (205)	120 (129)	300	364	200	50	200	200	50	3	2	3.7	4.3
295 (305)	220 (229)	400	464	300	50	200	200	100	4	2	4.4	5
395 (405)	320 (329)	500	564	400	50	200	400	50	5	3	5.2	5.8
495 (505)	420 (429)	600	664	500	50	200	400	100	6	3	6	6.6
595 (605)	520 (529)	700	764	600	50	200	600	50	7	4	6.7	7.3

¹ Indicates a value when two inner blocks are in close contact with each other.