


SKR46 Without Cover, Direct Motor Coupling

Model SKR46□□A (with a Single Long Block)

Model SKR46□□B (with Two Long Blocks)

For model number coding, see **A2-28**.

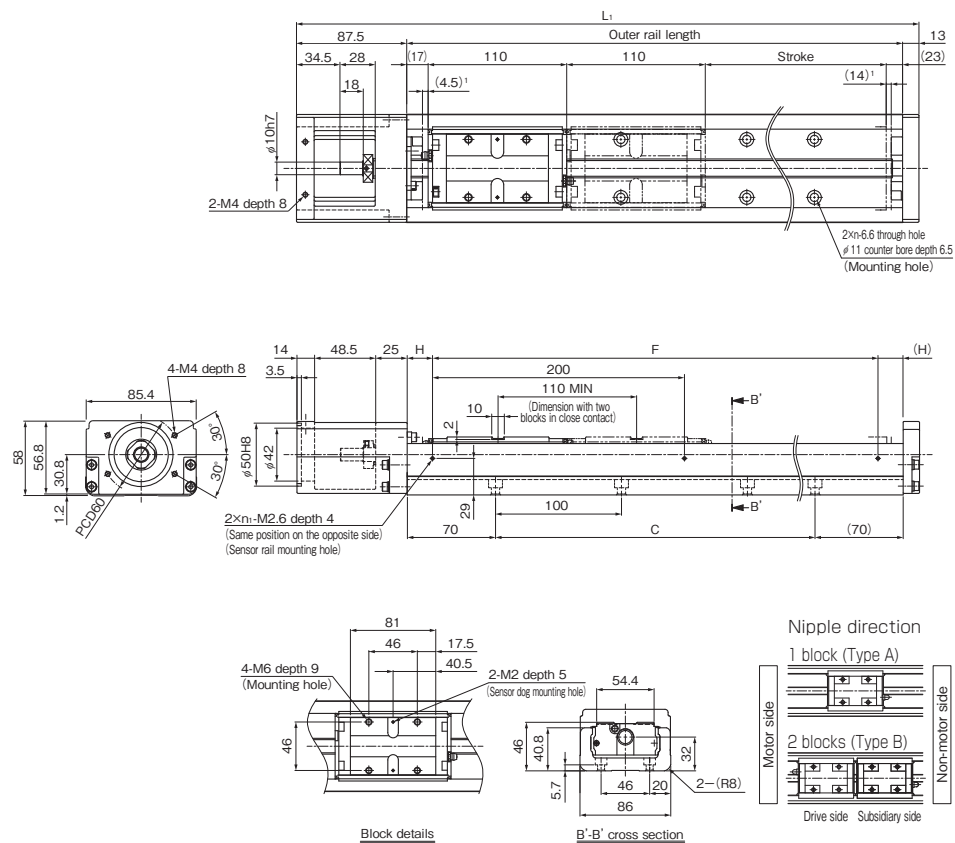

¹ Distance between the mechanical stopper and the stroke starting position.

Stroke (mm) (stroke between mechanical stoppers)		Outer rail length (mm)	Overall length L ₁ (mm)	C (mm)	F (mm)	H (mm)	n	n ₁	Overall main unit mass (kg)	
Type A	Type B ¹								Type A	Type B
190 (208.5)	80 (98.5)	340	440.5	200	200	70	3	2	6.7	7.7
290 (308.5)	180 (198.5)	440	540.5	300	400	20	4	3	8.1	9.1
390 (408.5)	280 (298.5)	540	640.5	400	400	70	5	3	9.5	10.5
490 (508.5)	380 (398.5)	640	740.5	500	600	20	6	4	10.9	11.9
590 (608.5)	480 (498.5)	740	840.5	600	600	70	7	4	12.3	13.3
690 (708.5)	580 (598.5)	840	940.5	700	800	20	8	5	13.8	14.8
790 (808.5)	680 (698.5)	940	1,040.5	800	800	70	9	5	15.2	16.2


¹ Indicates a value when two inner blocks are in close contact with each other.

SKR46 With Cover, Direct Motor Coupling

Model SKR46□□A (with a Single Long Block)

Model SKR46□□B (with Two Long Blocks)

For model number coding, see **A2-28**.

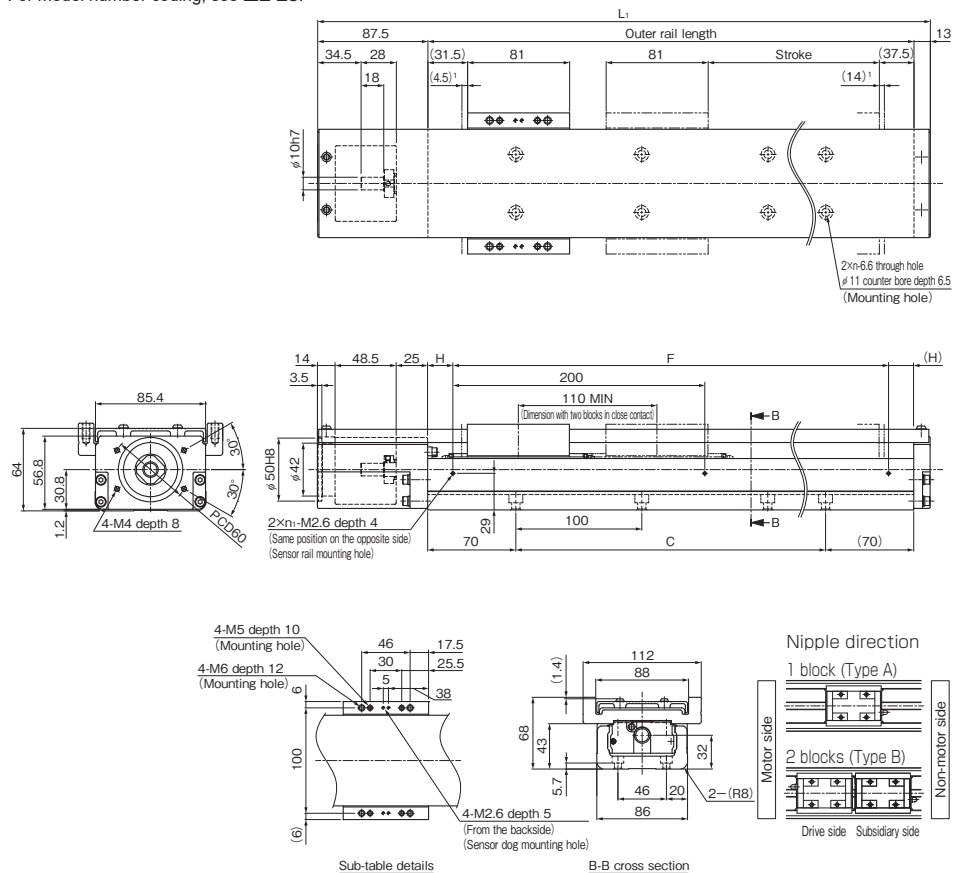

¹ Distance between the mechanical stopper and the stroke starting position.

Stroke (mm) (stroke between mechanical stoppers)		Outer rail length (mm)	Overall length L ₁ (mm)	C (mm)	F (mm)	H (mm)	n	n ₁	Overall main unit mass (kg)	
Type A	Type B ¹								Type A	Type B
190 (208.5)	80 (98.5)	340	440.5	200	200	70	3	2	7.7	9.1
290 (308.5)	180 (198.5)	440	540.5	300	400	20	4	3	9.2	10.6
390 (408.5)	280 (298.5)	540	640.5	400	400	70	5	3	10.7	12.1
490 (508.5)	380 (398.5)	640	740.5	500	600	20	6	4	12.2	13.6
590 (608.5)	480 (498.5)	740	840.5	600	600	70	7	4	13.7	15.1
690 (708.5)	580 (598.5)	840	940.5	700	800	20	8	5	15.2	16.6
790 (808.5)	680 (698.5)	940	1,040.5	800	800	70	9	5	16.7	18.1

¹ Indicates a value when two inner blocks are in close contact with each other.