


KR26 Without Cover, Direct Motor Coupling

Model KR26□□A (with a Single Long Block)

Model KR26□□B (with Two Long Blocks)

For model number coding, see **A2-136**.

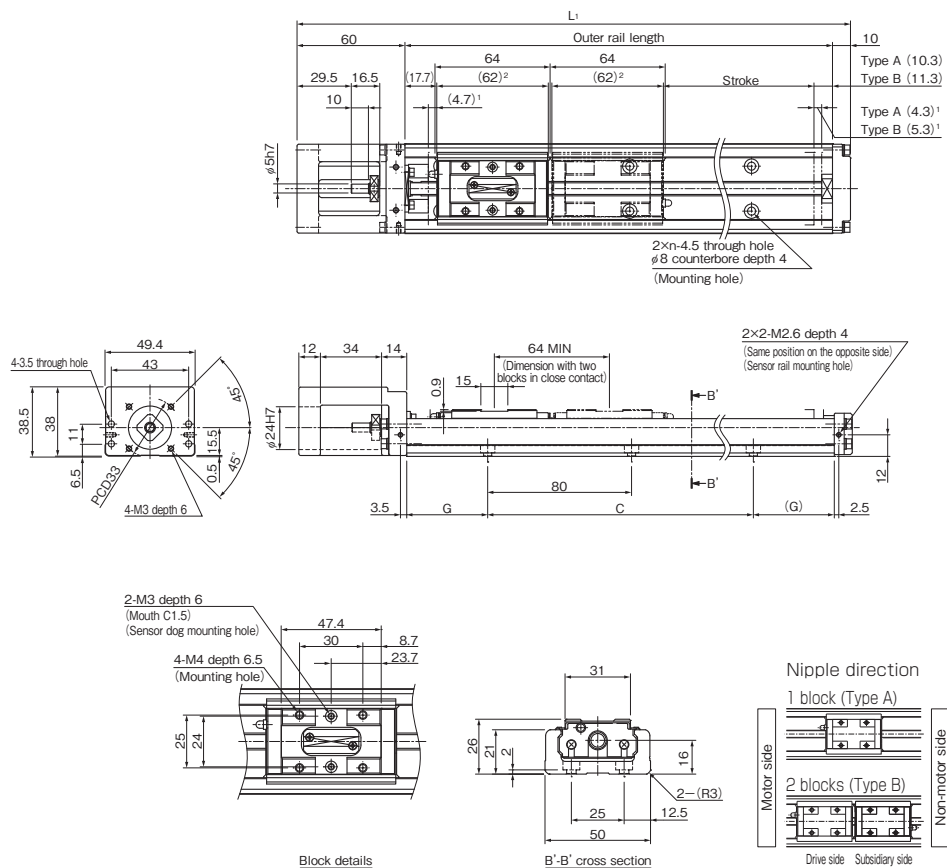

¹ Distance between the mechanical stopper and the stroke starting position.

² This indicates the block length when calculating the possible stroke range.
It is 126 mm (total) for a KR26 with two blocks in close contact with each other (Type B).

Stroke (mm) (stroke between mechanical stoppers)		Outer rail length (mm)	Overall length L ₁ (mm)	C (mm)	G (mm)	n	Overall main unit mass (kg)	
Type A	Type B ¹						Type A	Type B
60 (69)	—	150	220	80	35	2	1.04	—
110 (119)	45 (55)	200	270	160	20	3	1.25	1.44
160 (169)	95 (105)	250	320	160	45	3	1.46	1.65
210 (219)	145 (155)	300	370	240	30	4	1.67	1.86


¹ Indicates a value when two inner blocks are in close contact with each other.

KR26 With Cover, Direct Motor Coupling

Model KR26□□A (with a Single Long Block)

Model KR26□□B (with Two Long Blocks)

For model number coding, see **A2-136**.

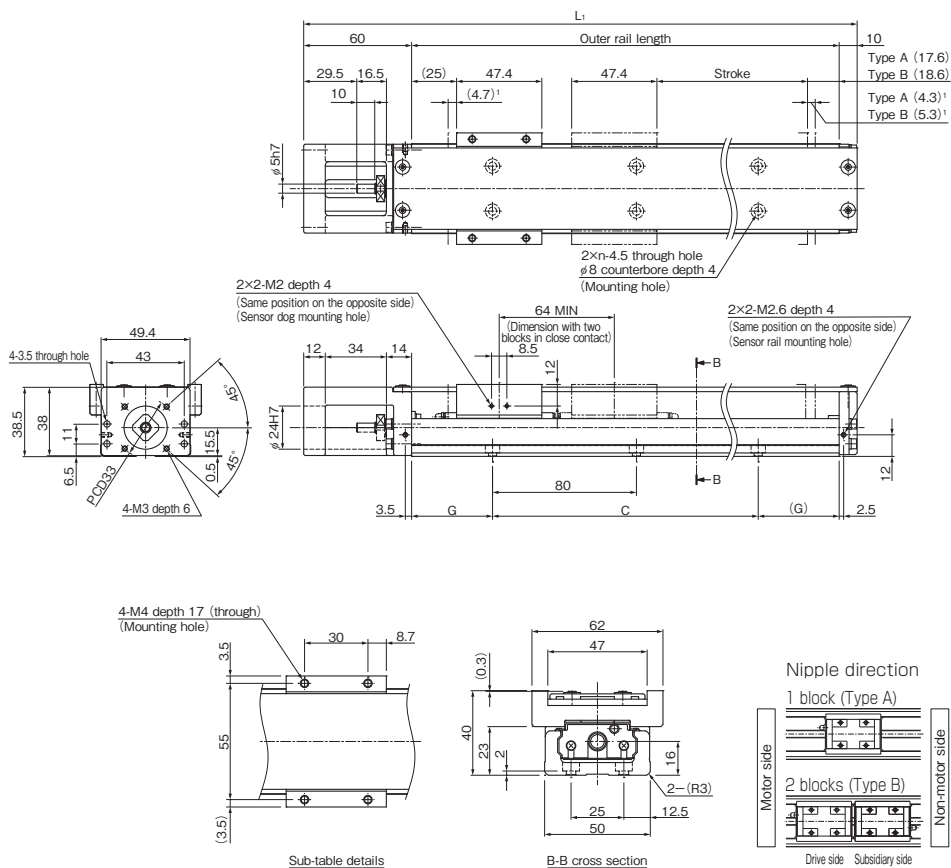

¹ Distance between the mechanical stopper and the stroke starting position.

Stroke (mm) (stroke between mechanical stoppers)		Outer rail length (mm)	Overall length L ₁ (mm)	C (mm)	G (mm)	n	Overall main unit mass (kg)	
Type A	Type B ¹						Type A	Type B
60 (69)	—	150	220	80	35	2	1.2	—
110 (119)	45 (55)	200	270	160	20	3	1.42	1.7
160 (169)	95 (105)	250	320	160	45	3	1.65	1.93
210 (219)	145 (155)	300	370	240	30	4	1.87	2.15

¹ Indicates a value when two inner blocks are in close contact with each other.