


KR46 Without Cover, Motor Wrap

Model KR46□□A (with a Single Long Block)

Model KR46□□B (with Two Long Blocks)

For model number coding, see **A2-136**.

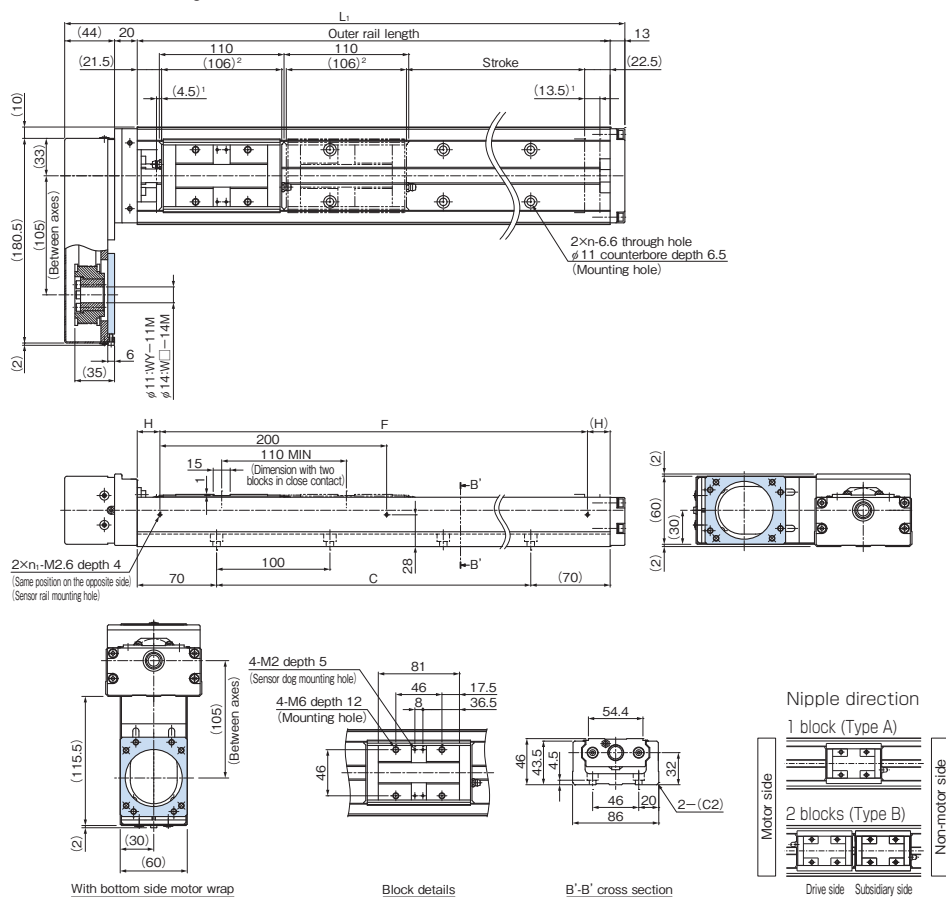

¹ Distance between the mechanical stopper and the stroke starting position.

² This indicates the block length when calculating the possible stroke range.
It is 216 mm (total) for a KR46 with two blocks in close contact with each other (Type B, without Q2).

Stroke (mm) (stroke between mechanical stoppers)		Outer rail length (mm)	Overall length L ₁ (mm)	C (mm)	F (mm)	H (mm)	n	n ₁	Overall main unit mass (kg)	
Type A	Type B ¹								Type A	Type B
190 (208)	80 (98)	340	417	200	200	70	3	2	7.6	8.6
290 (308)	180 (198)	440	517	300	400	20	4	3	9	10
390 (408)	280 (298)	540	617	400	400	70	5	3	10.4	11.4
490 (508)	380 (398)	640	717	500	600	20	6	4	11.8	12.8
590 (608)	480 (498)	740	817	600	600	70	7	4	13.2	14.2
690 (708)	580 (598)	840	917	700	800	20	8	5	14.6	15.6
790 (808)	680 (698)	940	1,017	800	800	70	9	5	16	17


¹ Indicates a value when two inner blocks are in close contact with each other.

KR46 With Cover, Motor Wrap

Model KR46□□A (with a Single Long Block)

Model KR46□□B (with Two Long Blocks)

For model number coding, see **A2-136**.

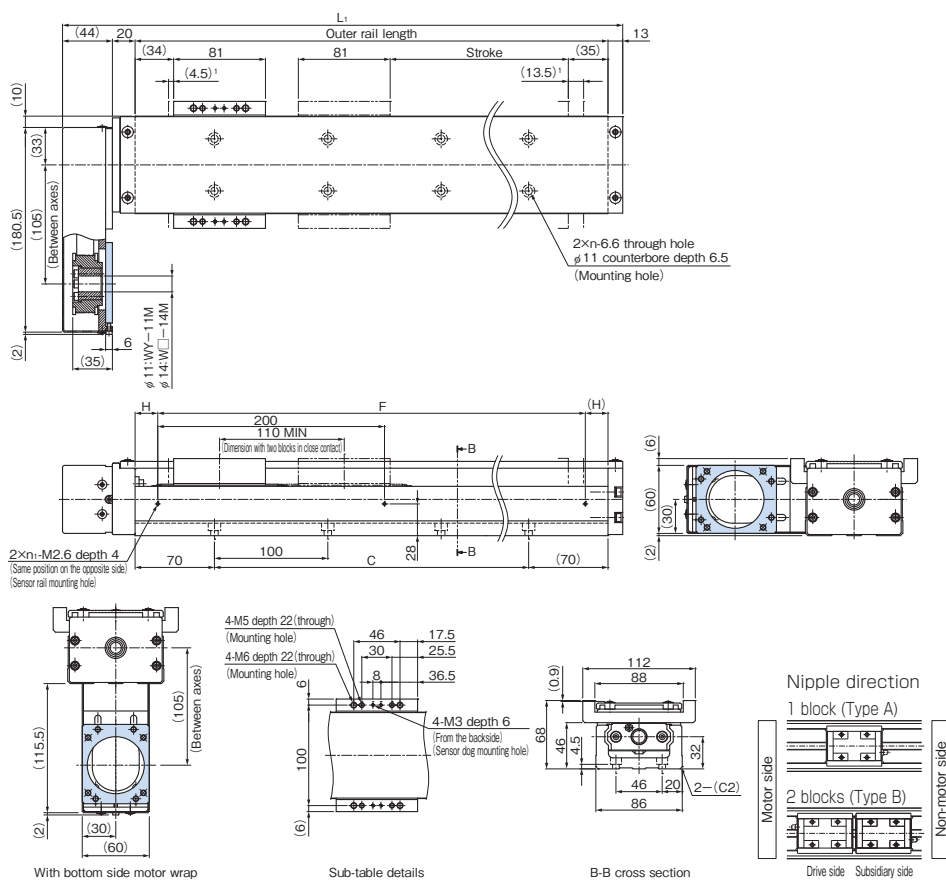

¹ Distance between the mechanical stopper and the stroke starting position.

Stroke (mm) (stroke between mechanical stoppers)		Outer rail length (mm)	Overall length L ₁ (mm)	C (mm)	F (mm)	H (mm)	n	n ₁	Overall main unit mass (kg)	
Type A	Type B ¹								Type A	Type B
190 (208)	80 (98)	340	417	200	200	70	3	2	8.6	10
290 (308)	180 (198)	440	517	300	400	20	4	3	10	11.4
390 (408)	280 (298)	540	617	400	400	70	5	3	11.5	12.9
490 (508)	380 (398)	640	717	500	600	20	6	4	13	14.4
590 (608)	480 (498)	740	817	600	600	70	7	4	14.5	15.9
690 (708)	580 (598)	840	917	700	800	20	8	5	16	17.4
790 (808)	680 (698)	940	1,017	800	800	70	9	5	17.4	18.8

¹ Indicates a value when two inner blocks are in close contact with each other.